

Auxiliary Load and Unload Terminals

Note: Terminals 5 & 7, 8 & 9, and 14 & 15 can be used as either dry contacts or 115VAC by using Terminals 1 (115VAC) and 2 (Neutral)

1	2	5	7	8	9	14	15	49D	49E	Motor Overload Safety Circuit
115VAC	Neutral	1 st Aux Load 5 Sec. Delay On		2 nd Aux Load 10 Sec. Delay On		Aux Unload				